



# La Hacienda

 
## Monterrey Steel Chimenea

User Instructions - Please keep for future reference

56022  
V1.0



### Tools required (not included)



8mm



10mm

**IMPORTANT** – Carefully remove any packaging before use, but retain the safety instructions.

These instructions form part of the product.

Please take note of all of the safety warnings listed in these instructions.

Please read these instructions in their entirety and retain them for future reference.

These instructions should be stored with the product.

This product is for domestic use **ONLY** and should not be used commercially or for contract purposes.

Produced in PRC for La Hacienda Ltd  
Hangar 27, Site C, Aston Down Airfield, Nr Stroud, Glos, GL6 8HR, UK  
[www.lahacienda.co.uk](http://www.lahacienda.co.uk)

# Safety and Care Advice

**Important - Please read these instructions fully before starting assembly**

**IMPORTANT** - Remove any packaging before use, but retain the safety instructions. Please read and follow the instructions before using the Chimenea, failure to do so may result in a fire, property damage, serious injury or death. We suggest you carry out assembly on a soft surface so as to avoid scratching the paint.

## **Check you have all components before proceeding.**

These instructions form part of the product.

Please take note of all of the safety warnings listed in these instructions.

Please read these instructions in their entirety and retain them for future reference.

These instructions should be stored with the Chimenea.

Please dispose of all packaging carefully and responsibly, recycling where possible.

## **WARNINGS - CAUTION!**

- This product is intended **FOR OUTDOOR USE ONLY**.
- **NEVER** leave a burning fire unattended.
- **DANGER** of carbon monoxide poisoning - **NEVER** light this product or let it smoulder or cool down in confined spaces.
- **FIRE HAZARD** - Hot embers may emit while in use.
- **DO NOT** use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as this may cause severe damage to the Chimenea.
- This product is **ONLY** suitable for use with untreated wood, La Hacienda Heat Logs or Easy Logs.
- **DO NOT** use this Chimenea on decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark.
- This product is **NOT** intended for cooking or heating food.
- **DO NOT** use this Chimenea as a furnace - **ONLY** use as a patio heater.
- Ensure that the Chimenea is positioned at least 2 metres away from flammable items.
- **DO NOT** handle or move the Chimenea whilst alight as it could become hot.
- Keep children and pets at a safe distance from the Chimenea when in use.
- Always inspect the Chimenea prior to use for fatigue and damage and replace as and when necessary.

# Safety and Care Advice

## Care and maintenance

### CARE & USE

- Ensure that the Chimenea is positioned on a permanent flat, level, heat resistant non-flammable surface away from flammable items. Ensure the Chimenea does not wobble.
- Ensure Chimenea has a minimum of 2 metres overhead clearance and has a minimum of 2 metres clearance from other surrounding items.
- Decide on the location and assemble the Chimenea as directed in the instructions. The assembled Chimenea is heavy so it is recommended the unit is assembled at the desired location to avoid lifting. Two persons are required to lift the assembled unit if it has to be moved. **DO NOT** drag the Chimenea across the floor.
- This Chimenea does not require any curing or outer sealant protection before use. The unit may be left outside all year if a La Hacienda Chimenea Cover is used.
- The high temperature paint coating will require re-coating every 4-6 months using La Hacienda High Temperature Paint.
- As this Chimenea is made from Steel, the Chimenea surface will start to rust as soon as it is placed outside. This is not a fault and is to be expected. To slow rusting, wipe the Chimenea surface after it has cooled completely with an oily rag after each use.
- If the Chimenea surface becomes scratched or chipped the damaged area should be re-coated with La Hacienda High Temperature Paint.
- Always inspect the Chimenea for fatigue and damage prior to use and replace as and when necessary.

### STARTING A FIRE

- To start a fire, place a small quantity of kindling wood and rolled newspaper in the unit on top of the log grate. Light the paper and allow a flame to build up. Once sufficiently alight add logs or larger pieces of untreated wood to the unit to increase the heat slowly.
- **DO NOT** overload the unit with fuel. If the fire is too intense this could damage the Chimenea.
- Fuel should never protrude from the front opening of the Chimenea.
- **ALWAYS USE HEAT RESISTANT GLOVES DURING THE HANDLING PROCESS.**

### EXTINGUISHING


- To extinguish the unit – stop adding fuel and allow the fire in the Chimenea to die or douse with sand.
- **DO NOT** use water, as this could damage the Chimenea.

### STORAGE


- If using an outdoor cover, only position once the fire has died and unit has completely cooled.

# Parts list


Please ensure you have all the parts listed below.

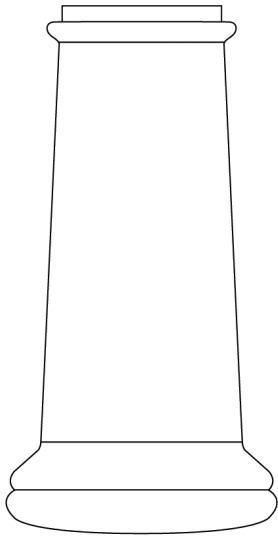


1. Main Flue x1

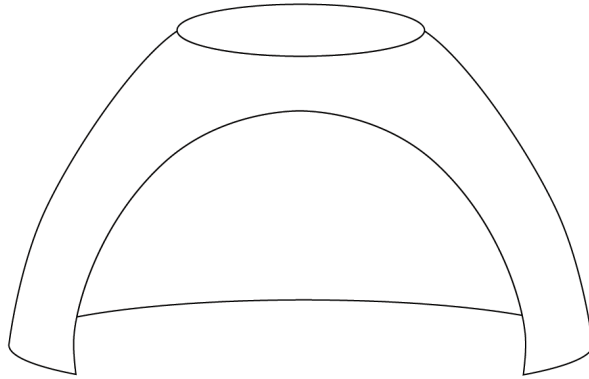


2. Top Bowl x1

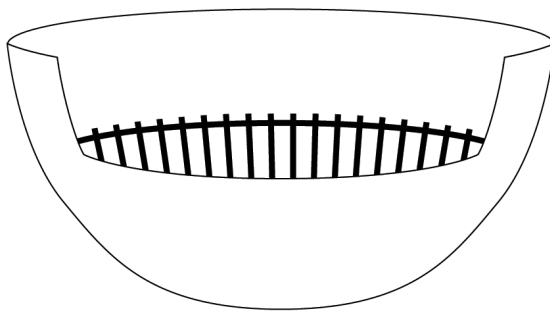

3. Bottom Bowl x1  
4. Fuel Grate x1(2 piece)

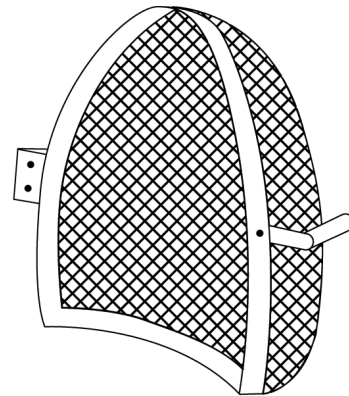

5. Mesh Door x1  
6. Mesh Door Handle x1

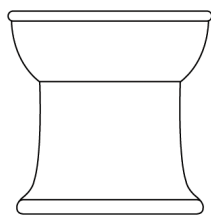

7. Top Flue x1



8. Legs x3



9. Tool x1



10. Side Handle x2



11. Rain Lid x1



12. Flue Grate x1









13. Door Latch x1

# Components - Fittings

Please check you have all the fittings listed below

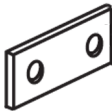
**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

|  |  |   |
|--|--|---|
| <br>Bolt M6 x 25mm<br>x6 Sets of bolts, washers,<br>lock washers and nuts | <br>Bolt M6 x 20mm<br>x6 Sets of bolts, washers,<br>lock washers and nuts | <br>Bracket x3 |
| <br>x6 Washer   | <br>x6 Lock Washer  | <br>x6 Nut     |

# Assembly Instructions


## Step 1

Attach the 3 x legs to the bottom bowl using 2 x lock washers, washers and nuts onto the pre-attached headless bolts on legs.

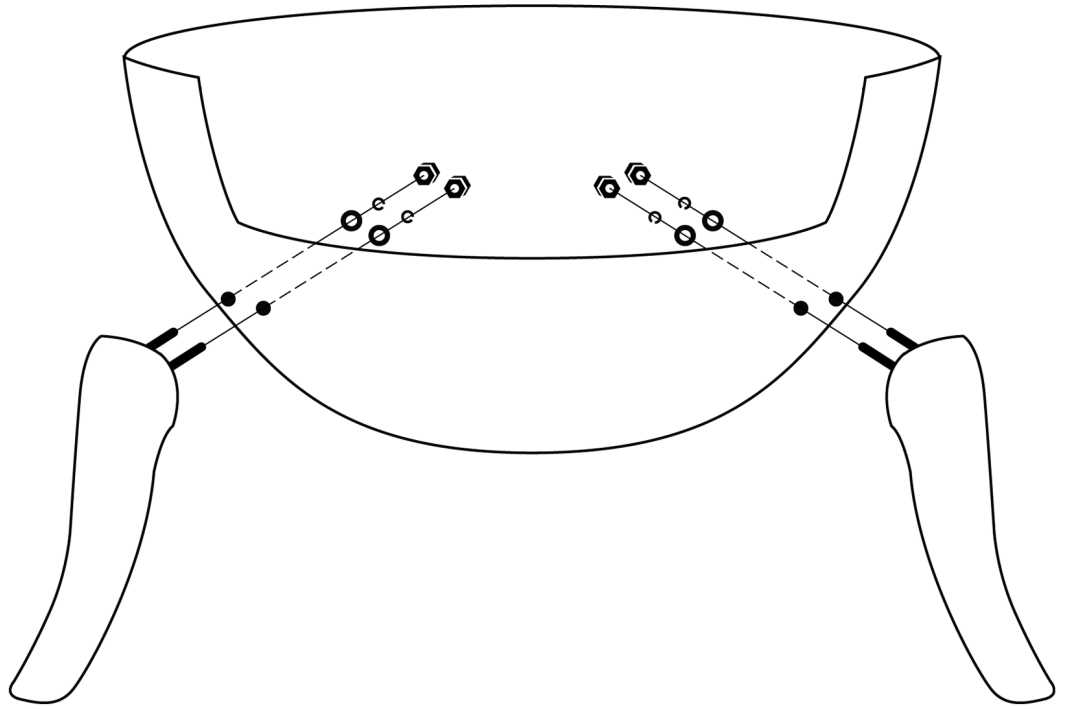

## Step 2

Using the 3 small brackets provided, fit the top bowl to the bottom bowl. The brackets are attached to the inside of the bowl. Use 2 x 20mm bolts lock washers, washers and nuts per bracket.

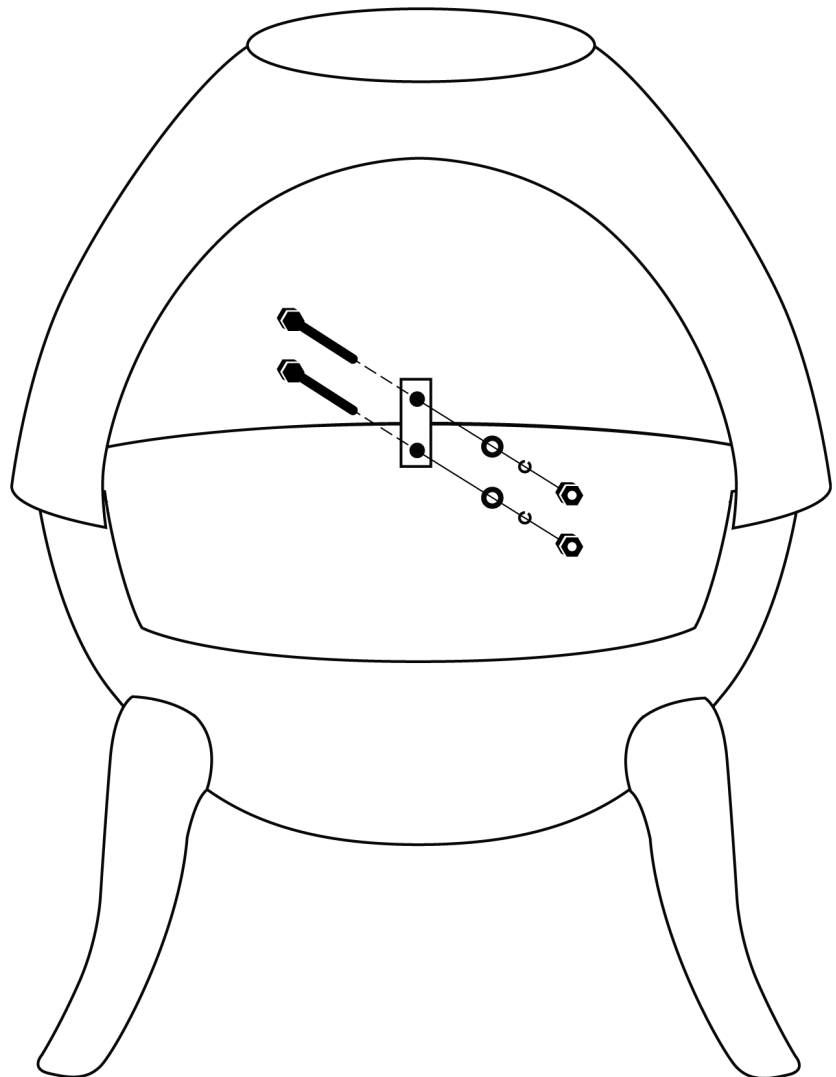


Do not fully tighten the bolts until the model has been fully assembled. Do not over tighten as this may cause damage.

# Assembly Instructions


## Step 3

Add the main flue and attach using 3 x 25mm bolts with lock washer, washers and nuts.

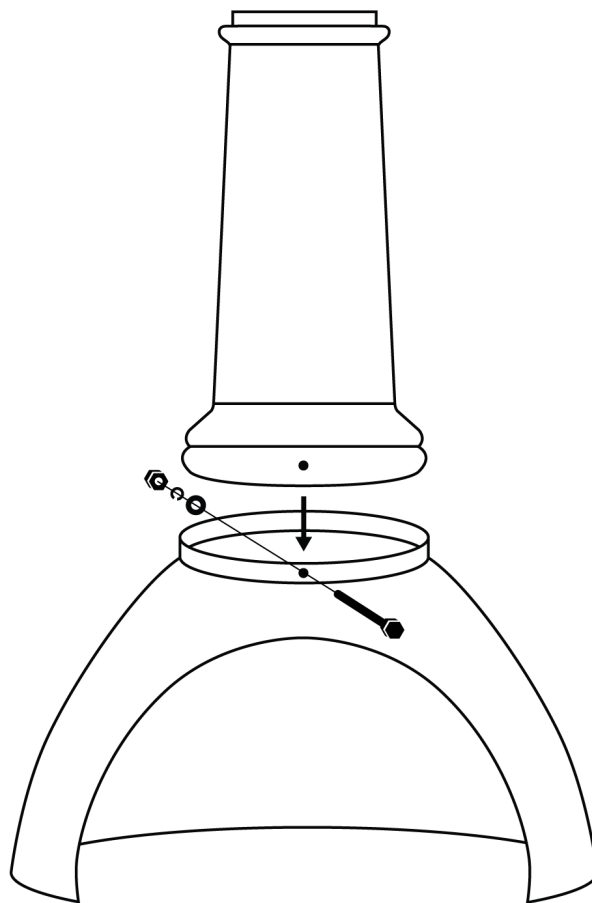

## Step 4


Add the top flue and attach using 3 x 25mm bolts with lock washers, washer and nuts.

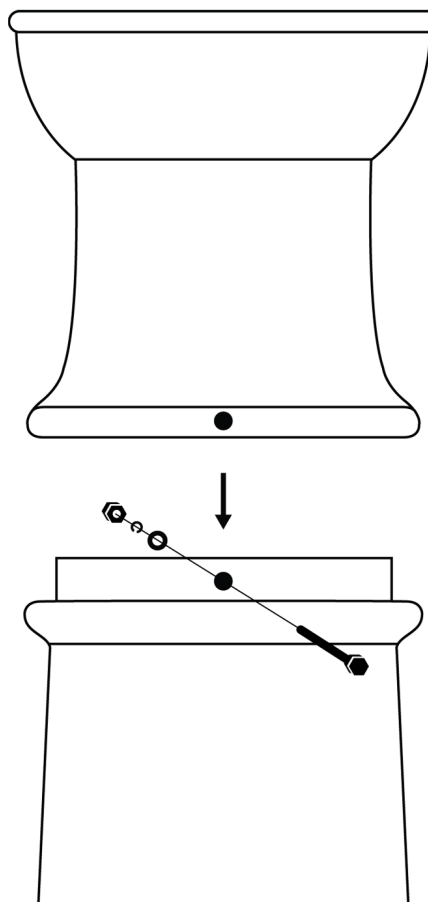

# Assembly Instructions

## Step 5

Attach the side handles to the top bowl using pre-attached headless bolts and by placing the included lock washer and washer to the inside of the top bowl before adding the nut and tightening.

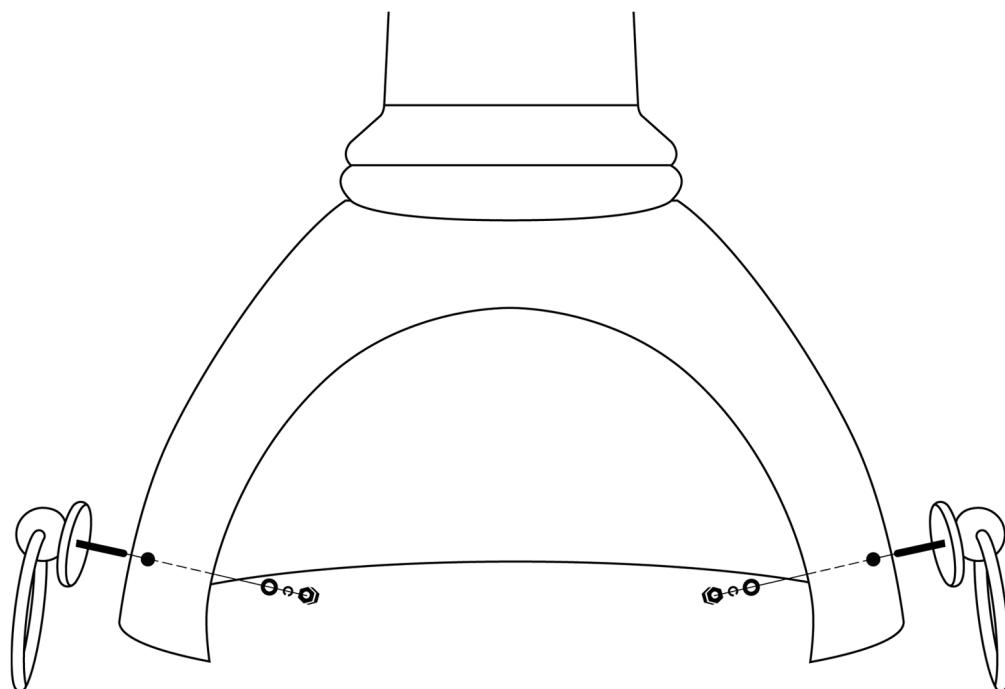




# Assembly Instructions

## Step 6

Attach mesh door to top bowl using 2 x pre-attached bolts and nuts. Attach mesh door latch to top bowl using 2 x pre-attached bolts and nuts. Attach mesh door handle to mesh door using pre-attached bolt and nut. Place fuel grate sections into the bottom of the Chimenea.

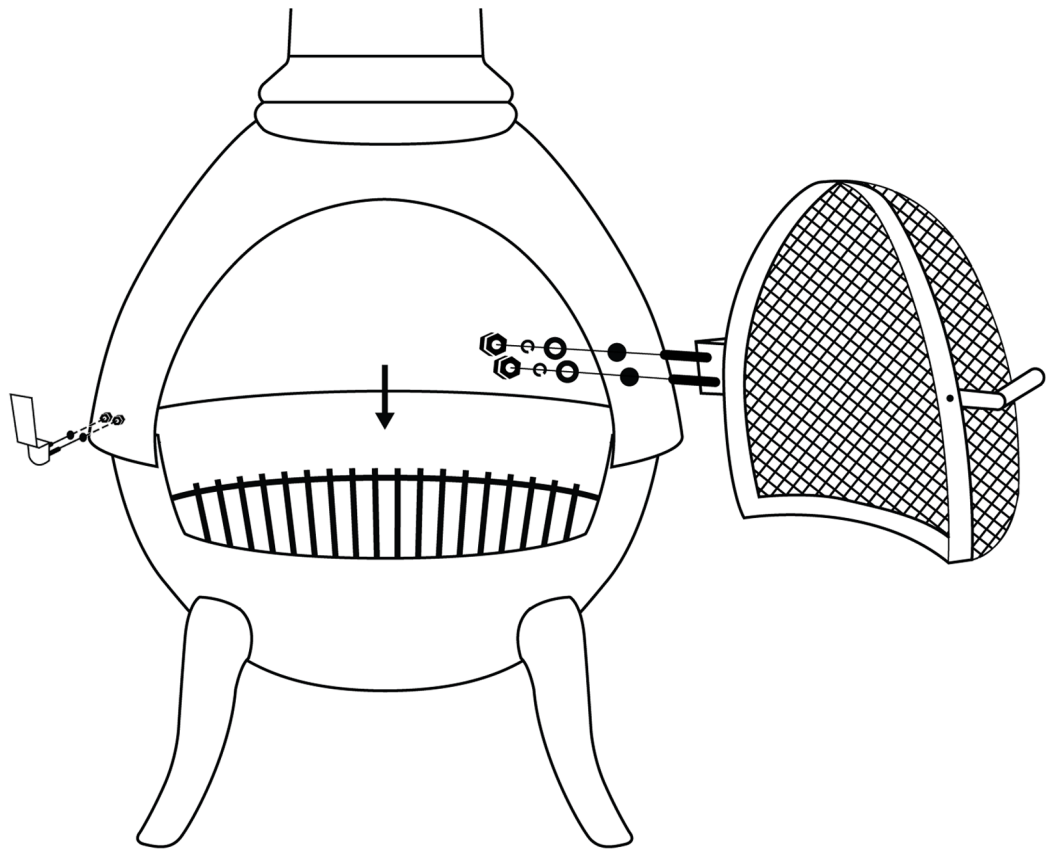

# Assembly Instructions

## Step 7

Insert flue grate into the top flue.

Your Chimenea is ready to use once all nuts and bolts are fully tightened, however **DO NOT** over tighten.

