

Le Creuset Bakeware Care Instructions

- Before first use remove packaging, hand wash in warm soapy water and dry thoroughly.
- Grease the inside of the tin sparingly before each use for best results.
- Oven safe to 240°C/Gas Mark 9.
- Metal kitchen utensils may be used, with care.
- Knives, or utensils with sharp edges, should not be used.
- Cool the tin for a few minutes before cleaning. Do not plunge into, or fill with, cold water when hot.
- Hand wash after each use and dry thoroughly before storing.
- If washing up water becomes trapped inside the rim, this may cause slight rusting in this area. This is a natural trait of carbon steel, not a fault, and will not affect the performance of the product.
- If desired, leave to dry in a warm oven for a few minutes to remove moisture from inside the rim.
- Do not use metal or harsh washing up pads/brushes or abrasive cleaning agents on any surface.
- Always use protective oven gloves when handling a hot tin during and after cooking.
- Not suitable for microwave ovens, dishwasher, grill or use on direct heat.