

Le Creuset Stoneware Utensil Jar Care Instructions

Introduction

- Suitable for use in the oven up to 260°C / 500°F & under the grill/broiler
- Microwave, freezer and dishwasher safe
- Easy clean, enamelled scratch resistant surfaces
- Totally hygienic cooking surface, will not absorb odours or flavours
- Strong and durable: resists staining, chipping and cracking
- Easy to hold: sure grip handles, knobs and rim

Instructions for use

The recommendations for care and use apply to all Le Creuset stoneware products.

BEFORE FIRST USE

Remove all packaging and labels. Wash the stoneware products in hot soapy water, rinse and dry thoroughly.

DO NOT use any piece on cooker hobs or any other direct heat source.

CLEANING AND CARE

- Before use wash the jar in hot soapy water, rinse and dry thoroughly.
- For most day-to-day cleaning, cool the jar for a few minutes then wash and dry as above, or wash in the dishwasher, allowing the full cycle to complete.
- Never leave a jar fully immersed in water.
- For removal of stubborn residues allow the jar to cool, fill with warm soapy water and allow it to soak for 10 – 20 minutes.
- Wash in the usual way using, if necessary, a plastic brush or scouring pad.