HOMEBASE

Interior Paint

Colour & Finish Guide



Explore Kitchen and Bathroom Colours



Emulsion Guide for Walls & Ceilings

Before you start, consider whether you need to prime or undercoat your walls & ceilings.



🔗 Protects against food splatter

🐼 Hardwearing & washable

Matt: A matt paint offers a smooth, low sheen finish that can hide imperfections.

SILVER CLOUD

MATT



mould

😽 Hardwearing & washable

Mid Sheen: A paint finish that reflects some light but has a lower sheen than silk emulsion.

Explore Standard Matt, Silk and Tough & Durable Colours





WALLS & CEILINGS

Prepare 🕅 🚖 🖉

To prevent paint splatter on other surfaces, remove furniture from your room or protect by covering with dust sheets, including your floor. Take down curtains, blinds or light fittings if necessary.

3 Ensure your walls are even by filling any holes or cracks using filler. Wait for filler to dry and then use sandpaper to gently buff the surface flat. Depending on the type & size of the filler blemishes, consider whether you need to spot prime before painting.



If you are painting your ceiling, start with this first so it doesn't drip onto freshly painted walls. Using a brush, paint the edges and corners of the ceiling first. Once the edges are completed use a roller to apply paint in square sections, starting in one corner first. Overlap paint at the edges for full coverage. Use a step ladder where necessary. Consider using an extension pole for your roller to prevent back ache. 6 Next up, it's time to get started on the walls. Again, use a brush to paint the edges and corners of the wall first. Then use a roller to evenly apply paint in a 'W' shaped motion from top to bottom, making your way across each wall. Use a small roller to cover any fiddly, hardto-reach areas.

0

to dry.

Ensure you allow the first coat to dry fully before applying another coat if recommended. Remove any masking tape when the paint is still wet to avoid any paint peeling away.

For paint to apply smoothly, surfaces should be free

from dirt, dust or grease. Clean walls with sugar soap

or detergent and water using a sponge. Wait for walls

Finally, use masking tape to protect skirting boards,

edges as well as fixtures & fittings such as light

switches and sockets. Now, you're ready to paint!

WOODWORK



To prevent paint splatter on other surfaces, remove furniture from your room or protect by covering with dust sheets, including your floor. Take down curtains, blinds or fittings if necessary.

Use masking tape to protect walls, edges and floors as well as fixtures & fittings.

Paint 厳 🎜 🔖

Por paint to apply smoothly, surfaces should be free from dirt, dust or grease. Clean surfaces with sugar scap or detergent and water using a sponge. Wait for surfaces to dry. 3 Ensure your surface is even by filling any holes or cracks using filler. Wait for filler to dry and then use sandpaper to gently buff the surface flat.

If you are painting directly onto bare wood, use a Primer & Undercoat first and apply a thin coat with a brush. If you are painting onto previously painted wood, gently sand the surface and wipe off any dust. If you are painting over a dark colour with a light colour, consider whether you need to use a Primer & Undercoat first.

6 Now, you're ready to paint. Apply a thin and even layer to your surface. Apply a number of thin coats for the best finish. Ensure each coat is dry before applying another. Remove any masking tape when the paint is still wet to avoid any paint peeling away.

Explore Finishes & Colours for Woodwork & Metal



HOW MUCH PAINT WILL YOU NEED?

We have highlighted the approximate paint coverage based on the pack sizes available.



2m x 2m sized room 2.5 Litres

Covers a surface area of up to 15msq based on 2 coats.



2m x 4m sized room 5 Litres

Covers a surface area of up to 30msq based on 2 coats.

Or try our online paint calculator, available on product pages at www.homebase.co.uk

Need some help choosing a colour?

Scan the QR code below and find your perfect shade with our Paint Colour Finder



At Homebase we want to help you create a home you love.

Our Paint has been designed with quality in mind for easy to apply colour to transform your home.

Proudly made in Great Britain.



homebase.co.uk



We make every effort to ensure accurate colour representation of the colour chips but owing to print limitations, the colours shown in this guide may not match exactly. We always recommend trying a tester pot first for colour accuracy. All products featured are subject to availability.

For further product information, contact our customer support line on 0333 003 7084

HHGL Limited, MK9 1BA & HHGL (ROI) Limited, D02 X576


HOMEBASE

Exterior Paint

Colour & Finish Guide

......

Explore Masonry Colours for Exterior Walls

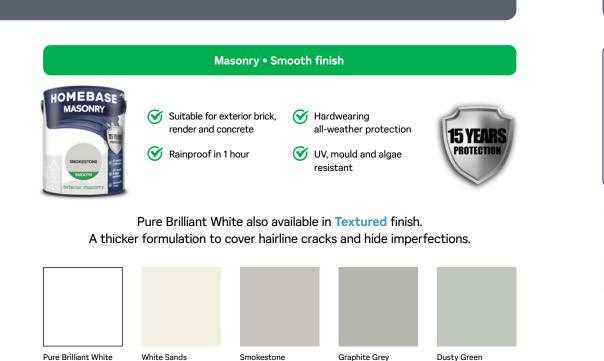





Can't decide which colour to choose?

Use our 90ml tester pots and you can try multiple colours and compare them to find your perfect colour.


Explore Finishes & Colours for Woodwork & Metal

Before you start, consider whether you need to prime or undercoat your surface.


HOMEBASE







Gloss finish



High sheen finish






G

Pure Brilliant White

Peace



- Quick drying formulation
- All weather protection
- Constant Low sheen finish








Empire Green





Thunder

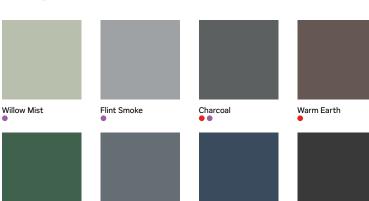

Oxford Blue

Black

.

Helpful Advice for Preparation & Painting

Before starting any exterior painting project, always check the weather forecast to ensure there is no chance of rain or temperatures below 8°C. Wear goggles and a face mask to protect eyes and prevent dust inhalation. Safely secure any ladders.

EXTERIOR MASONRY WALLS

Prepare 🕅 🛓 Ø

- To prevent paint splatter on other surfaces, move objects out of the way or protect by covering with dust sheets, including the floor. Take down any fittings such as lighting if necessary.
- 3 If desired, fill any holes or cracks using masonry filler. Wait for filler to dry and then use sandpaper to gently buff the surface flat. Depending on the type & size of the filler blemishes, consider whether you need to spot prime before painting.

Paint 🍵 🍞 🔪

- 5 Using a brush, paint the edges and in corners of the walls first. Once the edges are completed use a roller to apply paint in square sections starting in one corner first and working top to bottom. Overlap paint at the edges for full coverage. Use a step ladder where necessary. Use an extension pole for your roller to reach high areas and prevent back ache.
- 2 For paint to apply well, surfaces should be free from dirt, dust, mould or flaking paint. Remove dirt with a stiff bristle brush (not wire) and clean off mould or algae using a fungicidal wash. If your surface is chalky, weathered or porous, you will need to apply a stabilising solution. Wait for walls to dry.
- 4 Finally, use masking tape to protect window frames or edges as well as fixtures & fittings. Now, you're ready to paint!
- 6 Ensure you allow the first coat to dry fully before applying another coat if recommended. Remove any masking tape when the paint is still wet to avoid any paint peeling away.

EXTERIOR WOODWORK & METAL

Prepare 🕅 🛔 Ø

- 1 To prevent paint splatter on other surfaces, move objects out of the way or protect by covering with dust sheets, including the floor. Take down any fittings such as lighting if necessary.
- 3 If you're painting wood, fill any holes or cracks using wood filler. Wait for filler to dry and then use sandpaper to genty buff the surface flat. Depending on the type & size of the filler blemishes, consider whether you need to spot prime before painting.
- 4 Finally, use masking tape to protect window frames or edges as well as fixtures & fittings. Now, you're ready to paint!

Paint 🍵 🍞 🔪

6 Now, you're ready to paint. Use a brush to paint edges, grooves or small details and a roller for larger areas. Apply a thin and even layer to your surface. Apply a number of thin coats for the best finish. Ensure each coat is dry before applying another.

- 2 For paint to apply well, surfaces should be free from dirt, rust or flaking. Remove dirt with a stiff bristle brush (not wire) and use sandpaper to smooth rust or flaky paint.
- 5 If you are painting directly onto bare wood or metal, use a Primer & Undercoat first and apply a thin coat with a brush. If you are painting onto previously painted wood, gently sand the surface and wipe off any dust. If you are painting over a dark colour with a light colour, consider whether you need to use a Primer & Undercoat first. Wait for surfaces to dry.



HOW MUCH PAINT WILL YOU NEED?

We have highlighted the approximate paint coverage based on the pack sizes available.



Textured Masonry 5L Covers a surface area of up to 32m² based on 2 coats.



Smooth Masonry 5L Covers a surface area of up to 60m² based on 2 coats.



Smooth Masonry 10L Covers a surface area of up to 120m² based on 2 coats.

Or try our online paint calculator, available on product pages at www.homebase.co.uk



homebase.co.uk

We make every effort to ensure accurate colour representation of the colour chips but owing to print limitations, the colours shown in this guide may not match exactly. We always recommend trying a tester pot first for colour accuracy. All products featured are subject to availability.

For further product information, contact our customer support line on 0333 003 7084



HHGL Limited, MK9 1BA & HHGL (ROI) Limited, D02 X576