


Vermont Floor Standing Vanity (1 Drawer 2 Door)

IMPORTANT NOTE



Check all product contents and read instructions before starting installation.

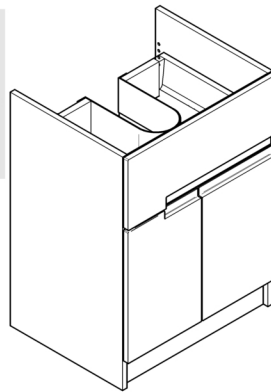


SAFETY WARNINGS


Handle product with care
Keep all small parts away from children
If product is above 20kg (see packaging)
it requires 2 people to carry & install it

Vermont Floor Standing Vanity
(1 Drawer 2 Door)

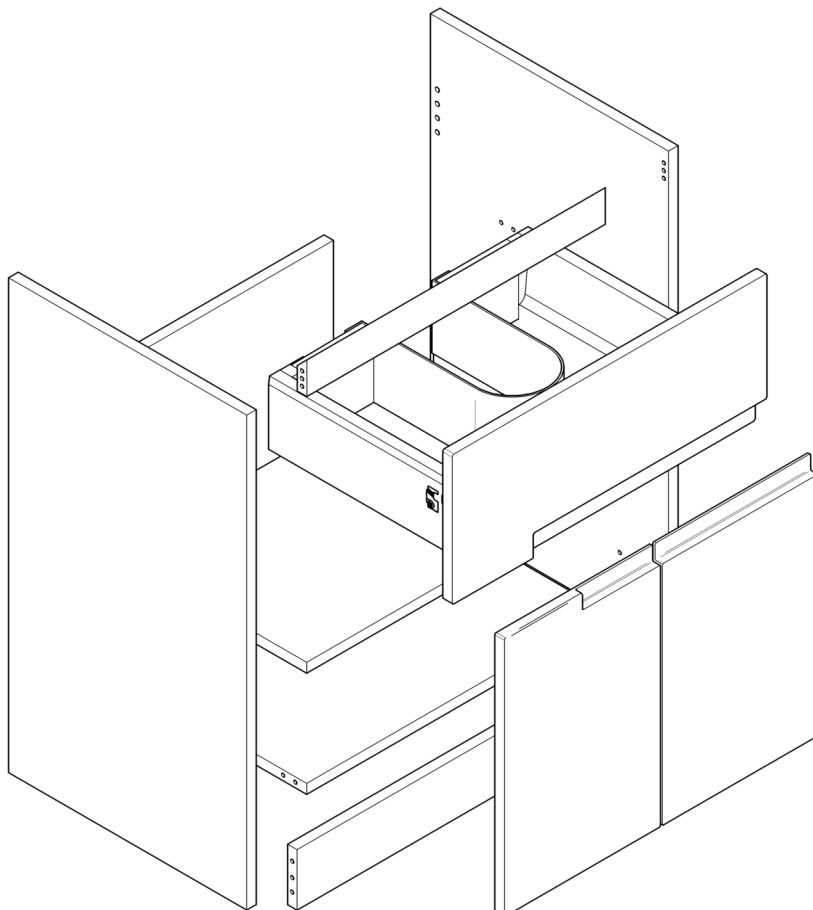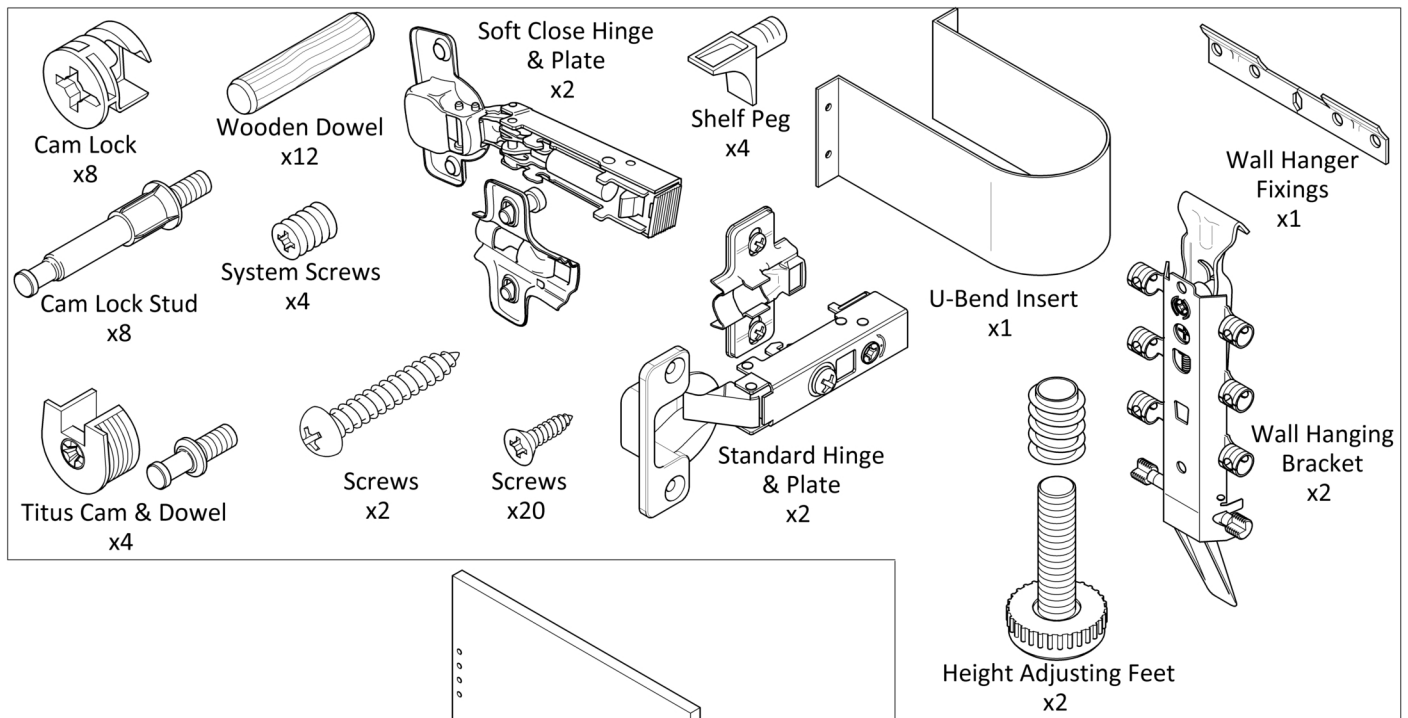


Tools Required

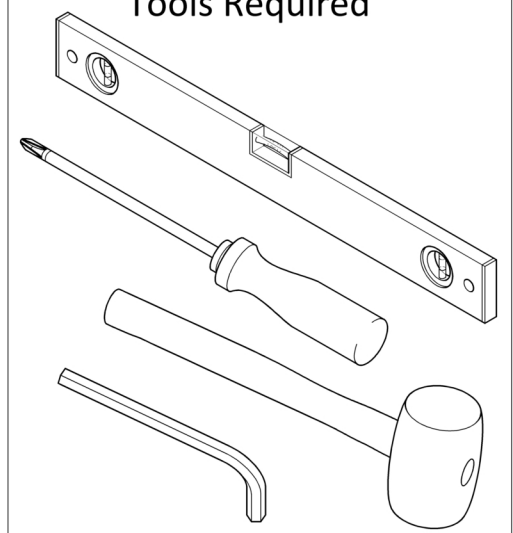

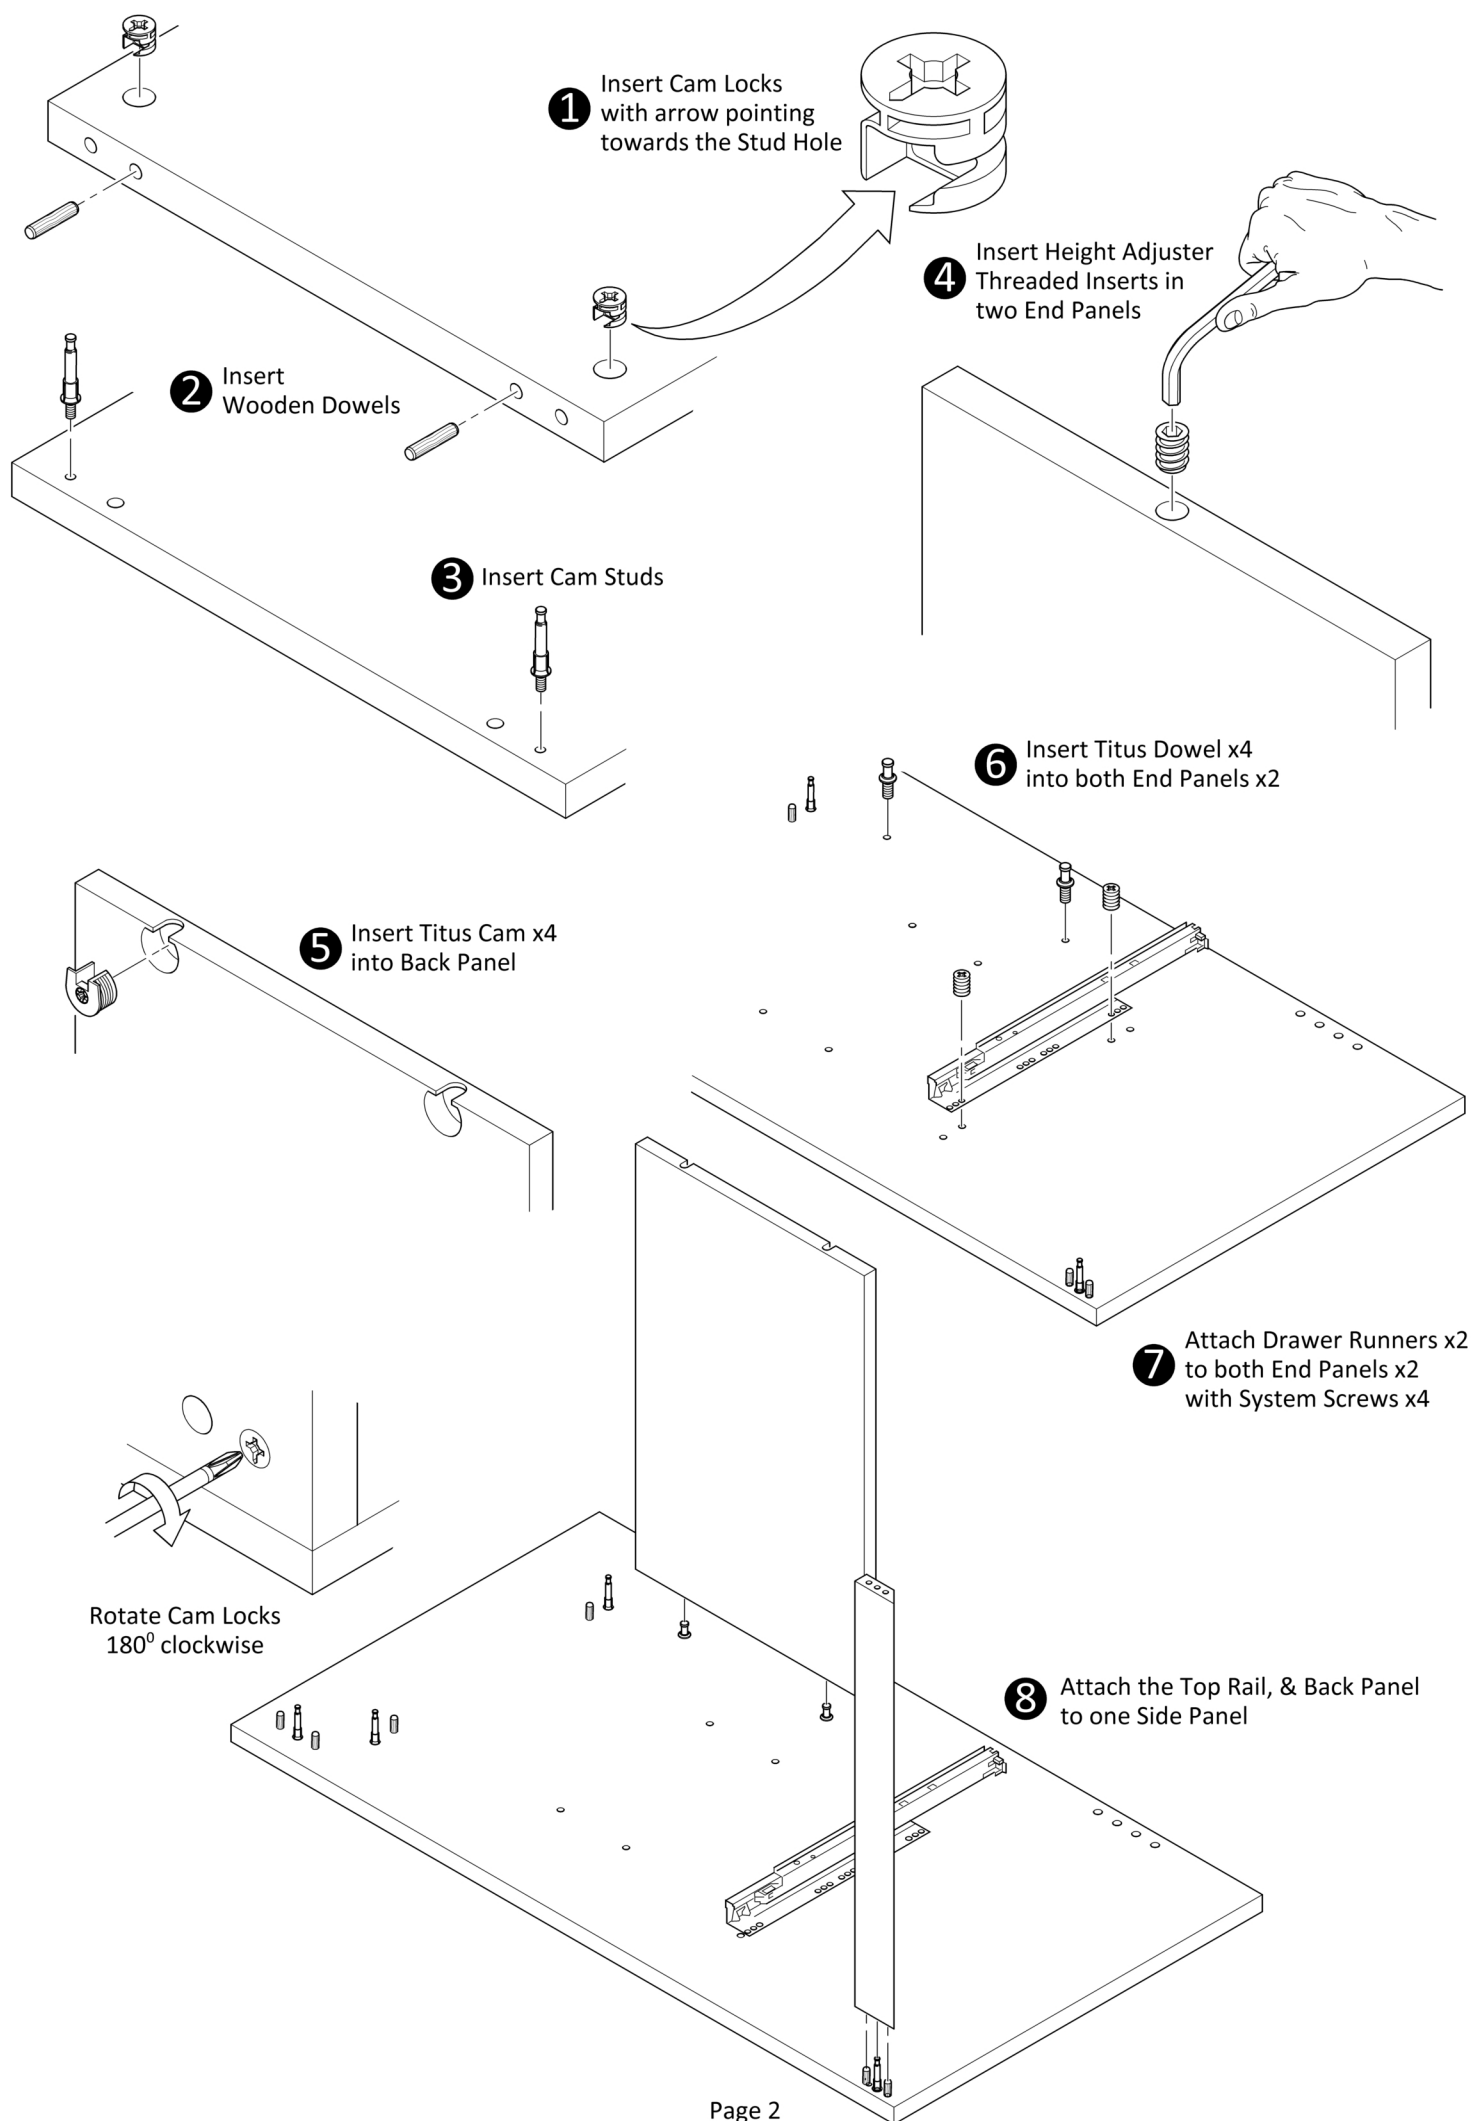


9 Attach the Bottom Panel, & Plinth Rail to the assembly

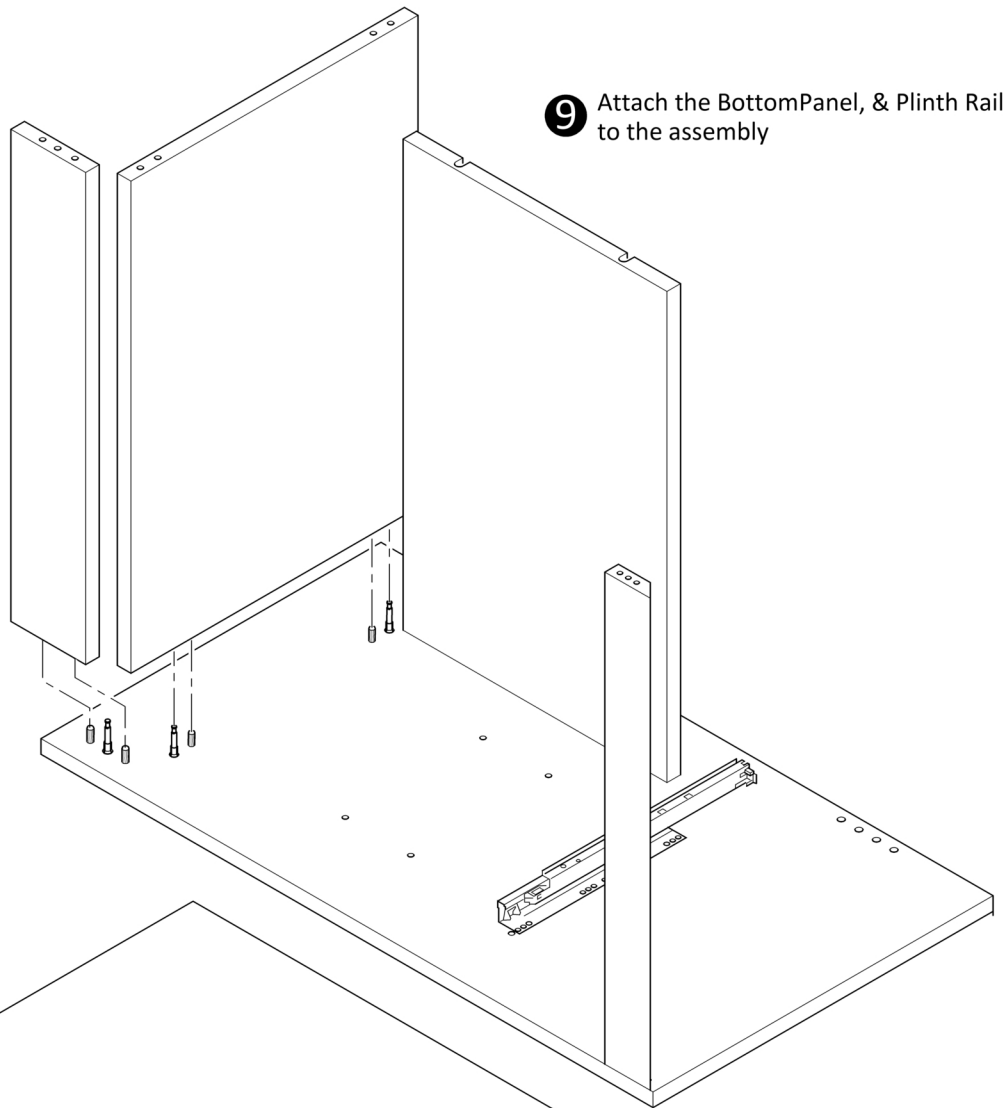

Rotate Cam Locks
180° clockwise









10 Attach the remaining End Panel to the assembly

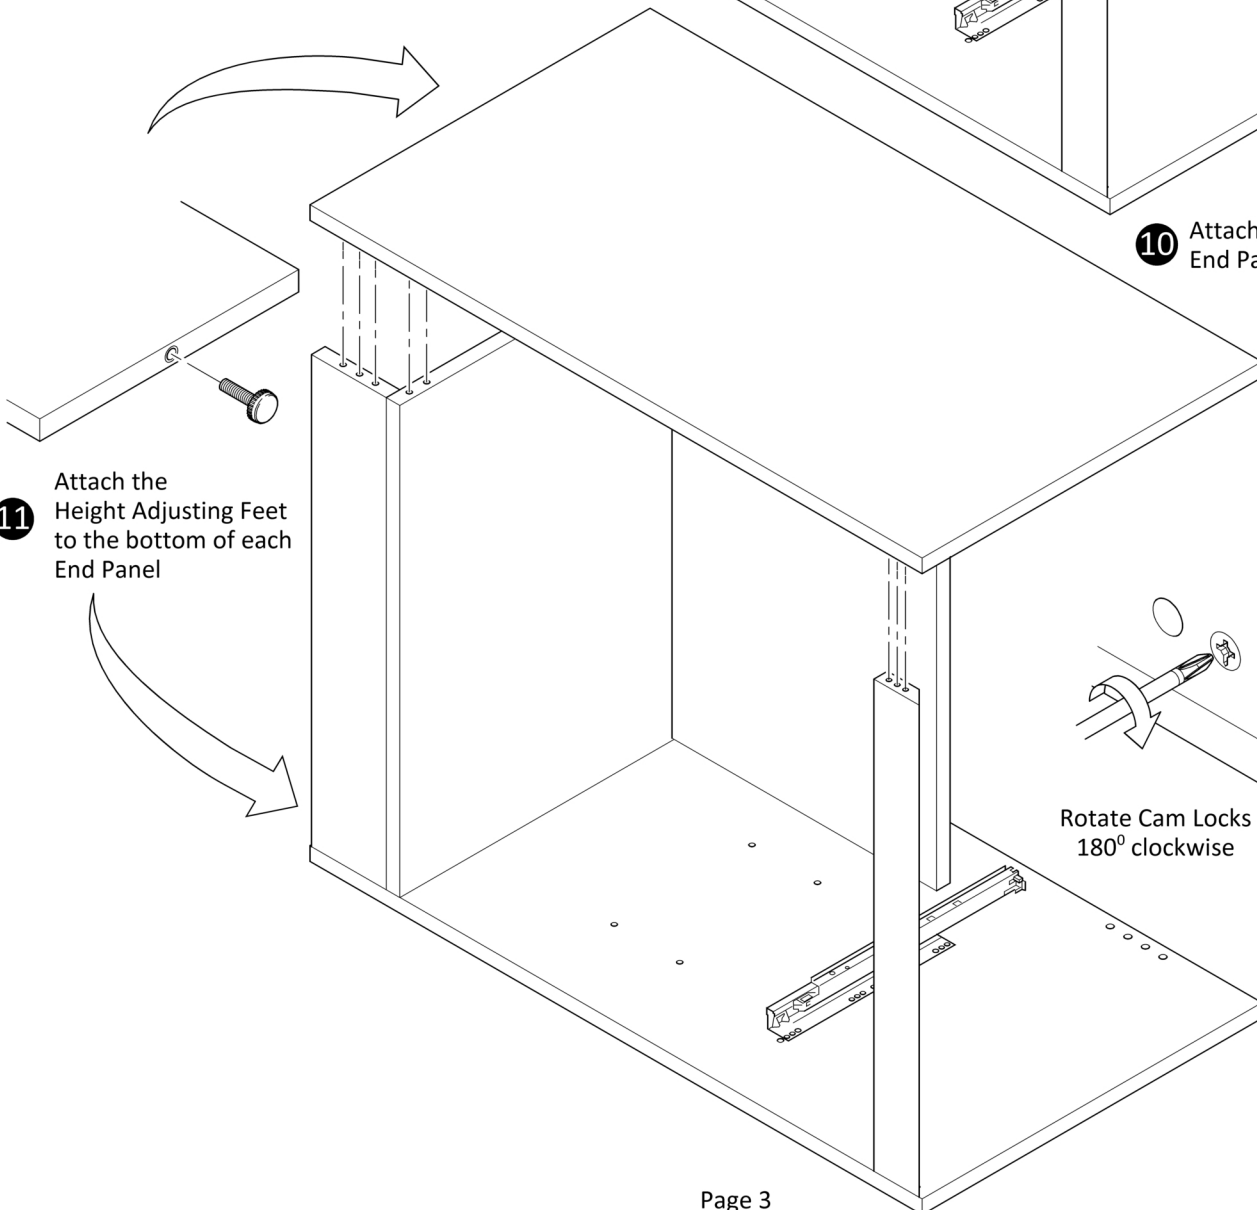



Rotate Cam Locks
180° clockwise


11

Attach the
Height Adjusting Feet
to the bottom of each
End Panel

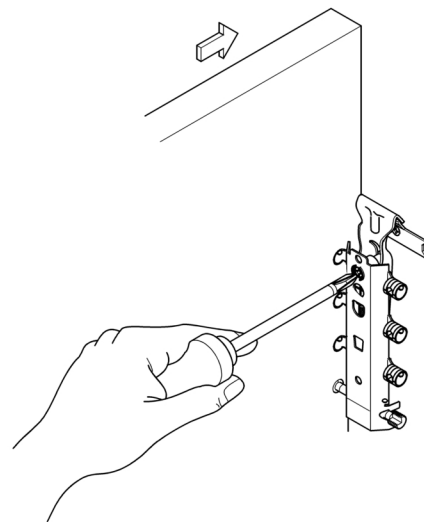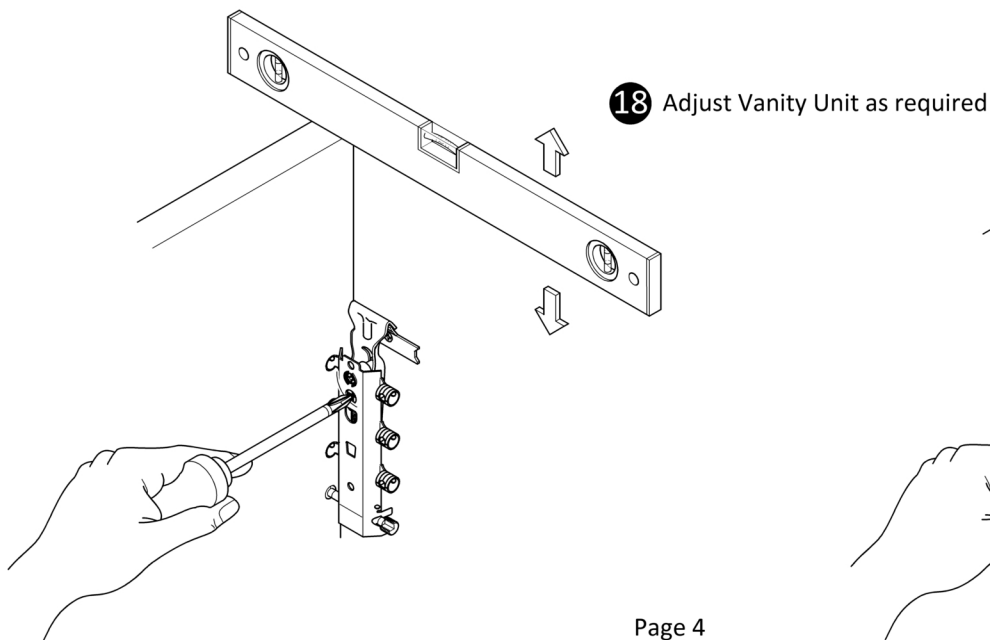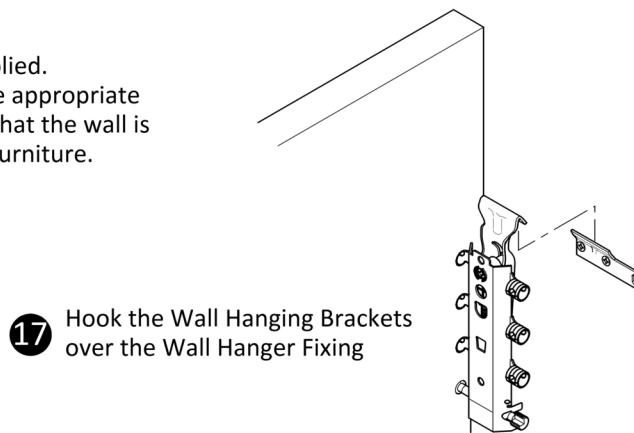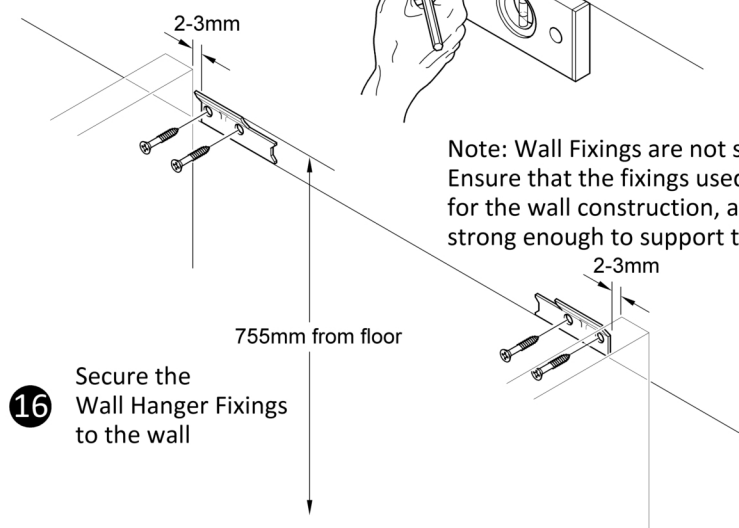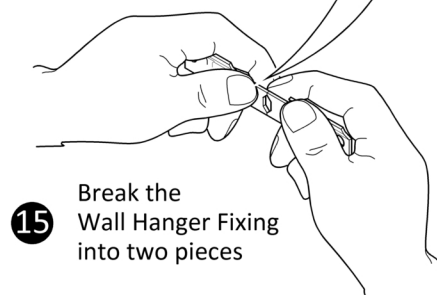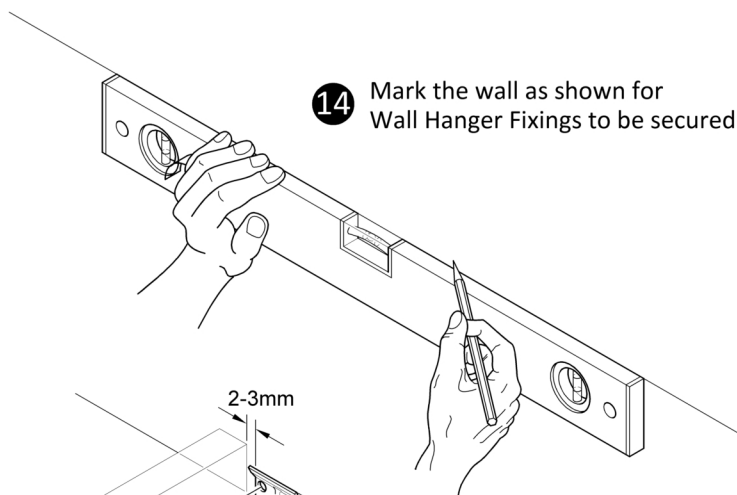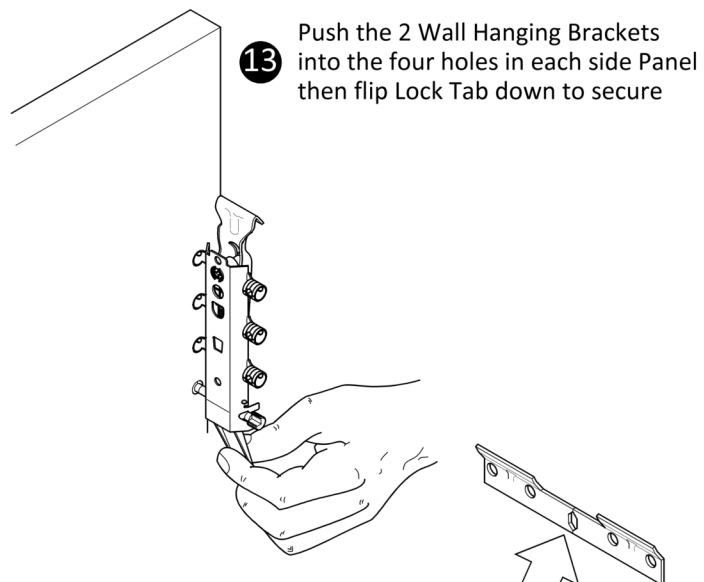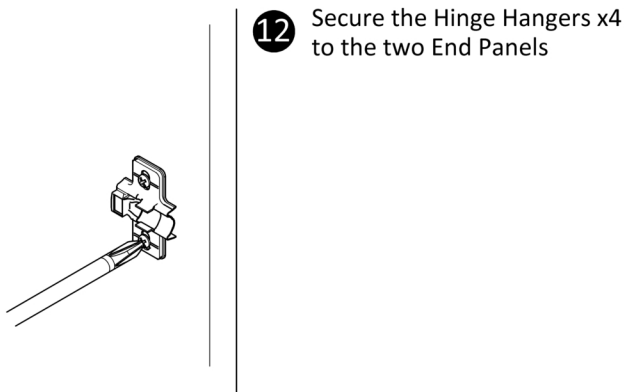

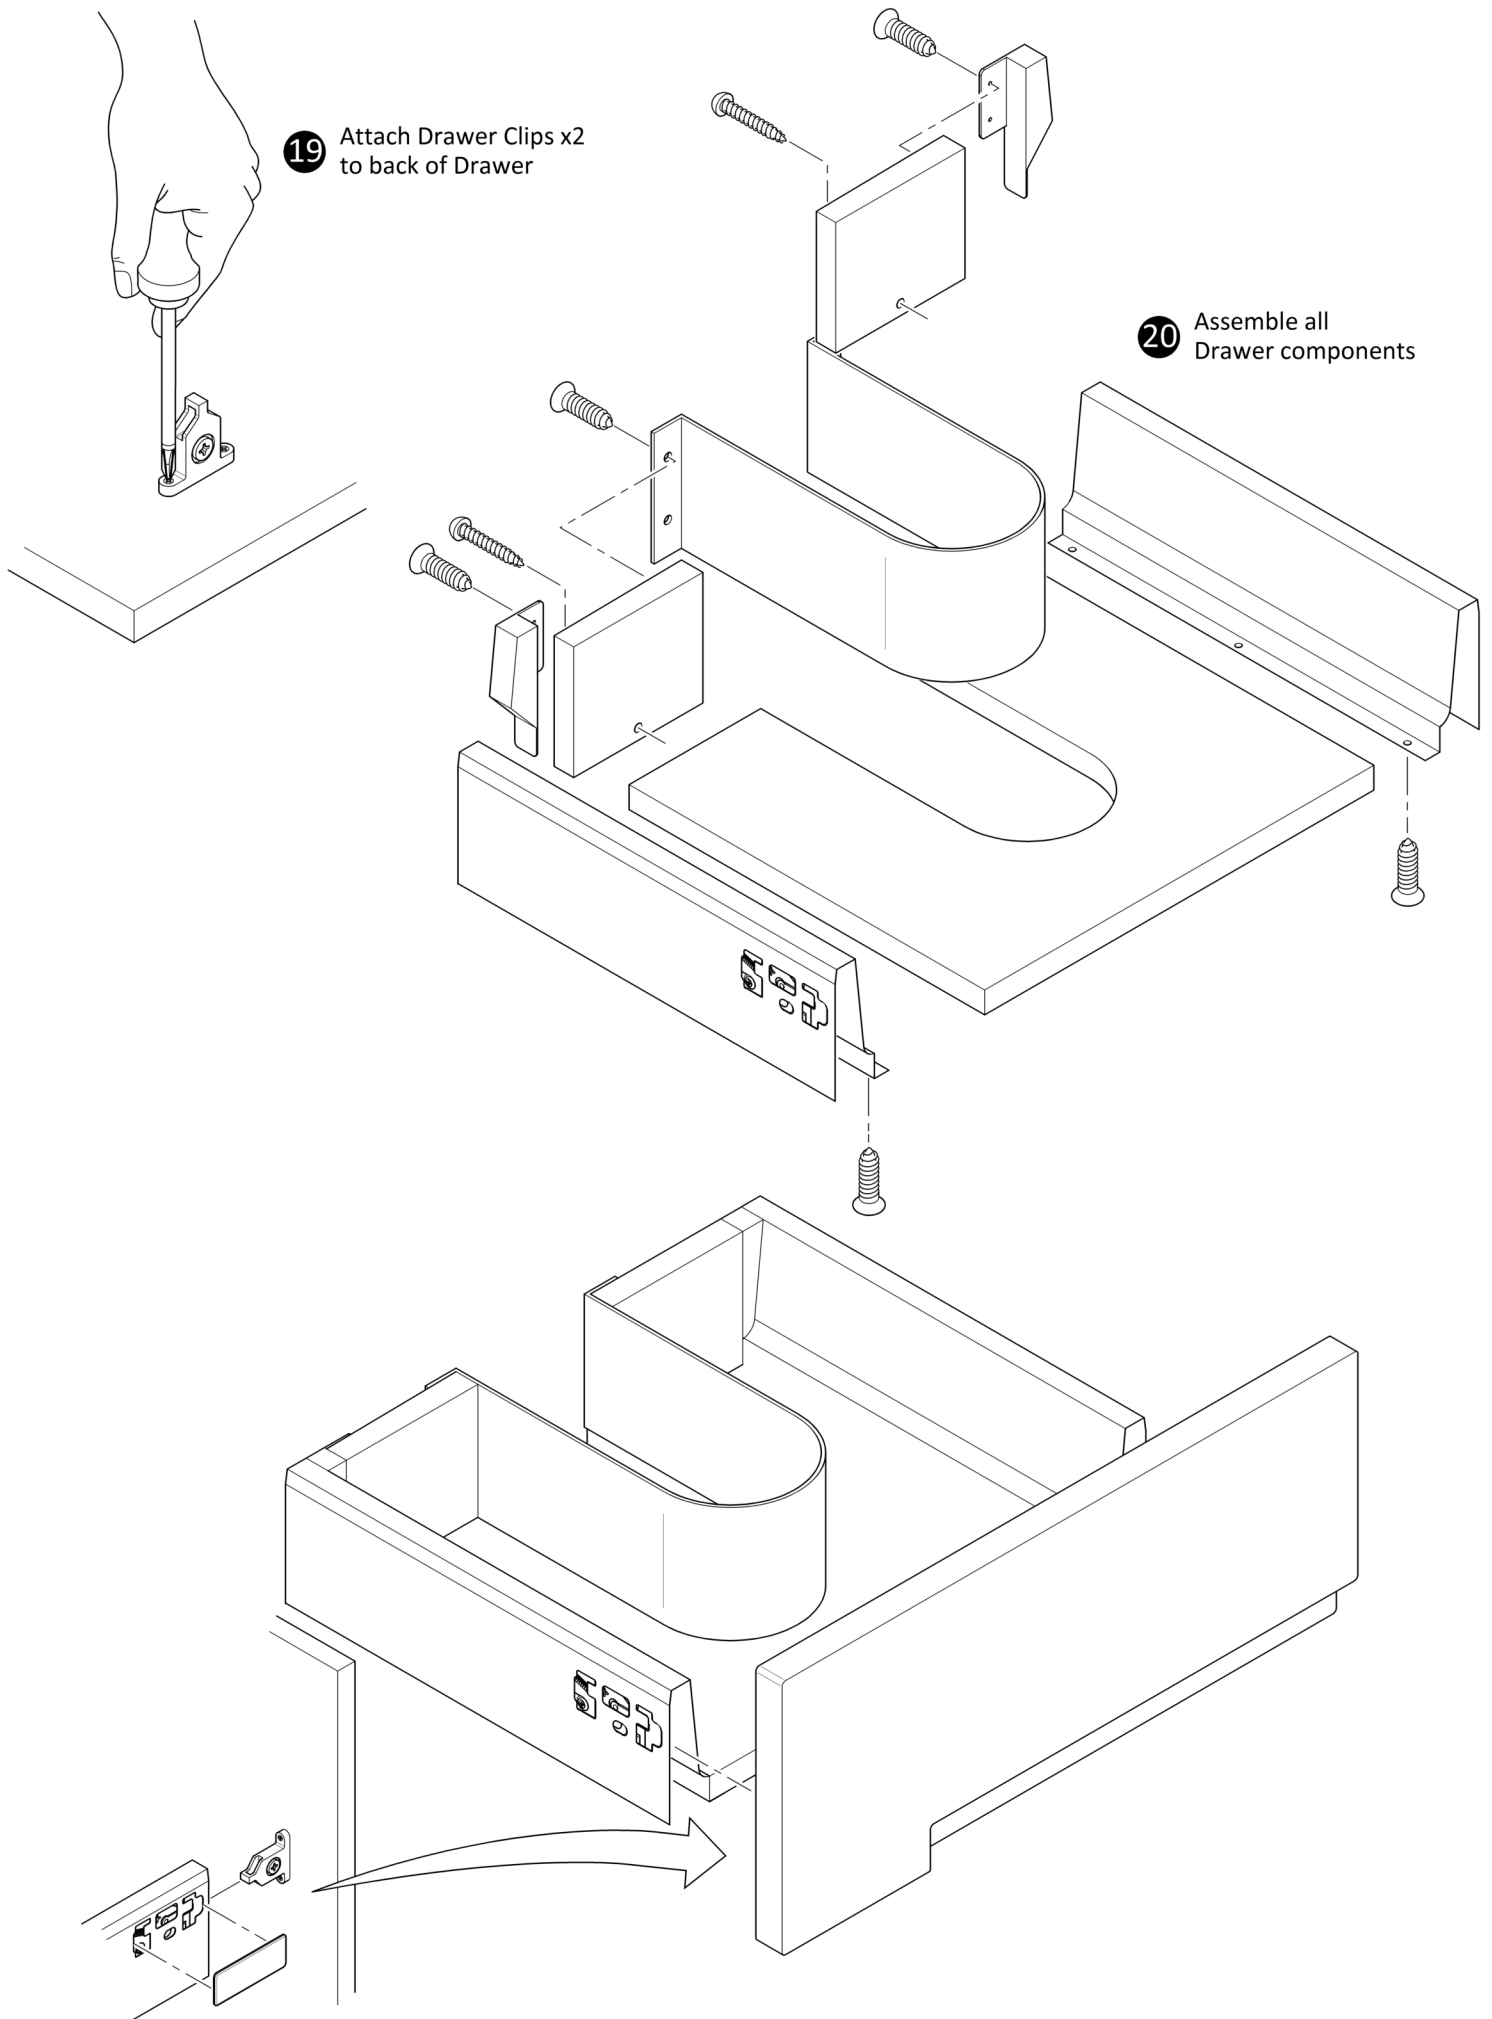

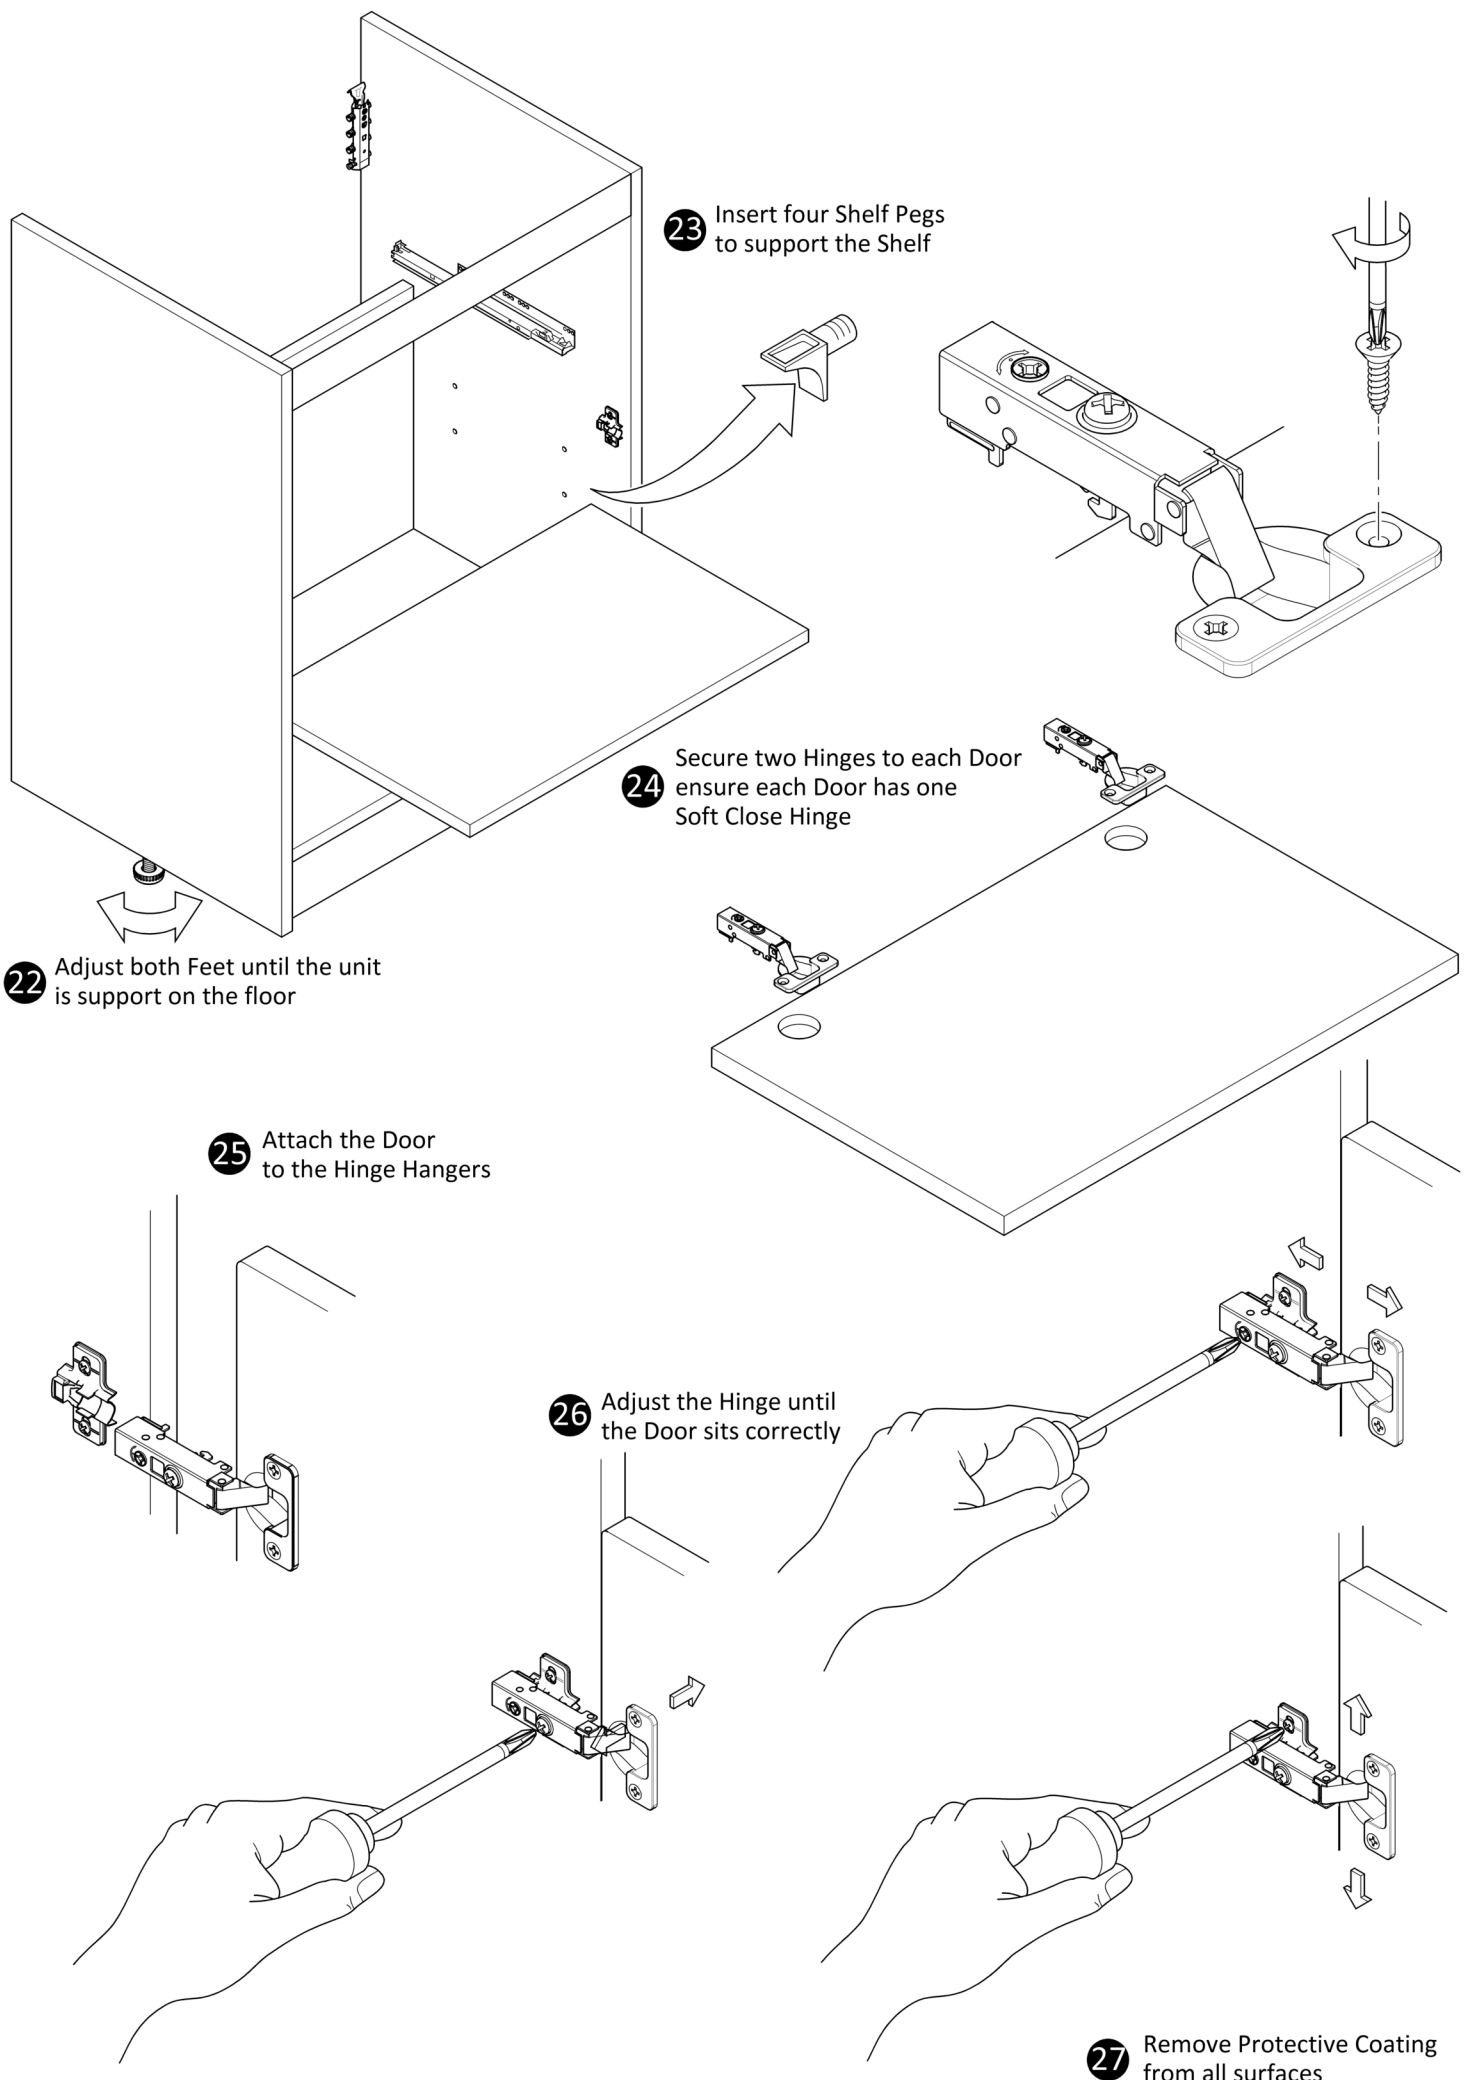

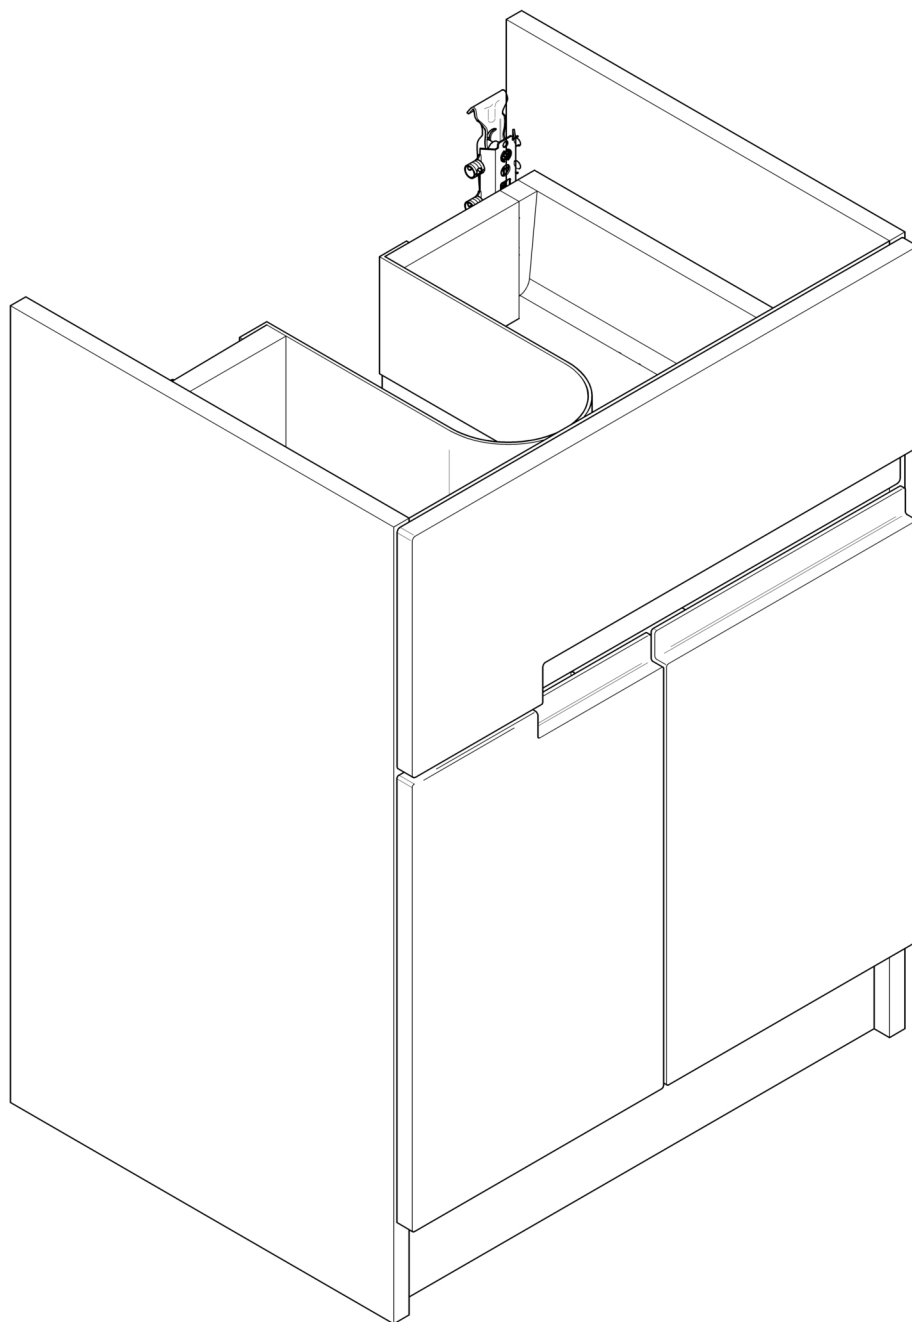

Care and Maintenance


Please Leave with the householder

This furniture is made of wood, and has a water resistant finish. It should not be left wet. The quality of the finish is best maintained if it is wiped with a dry cloth after use. It should only be cleaned using a soft damp cloth followed by a dry cloth. Do not use bleach or any abrasive cleaner.

Polymarble Basins

Installation:

When installing on furniture apply a bead of silicone around the top of the furniture to hold the basin in position and to prevent water collecting between the basin and the cabinet. If water is allowed to collect between the basin and the cabinet it can cause damage to the furniture panels.

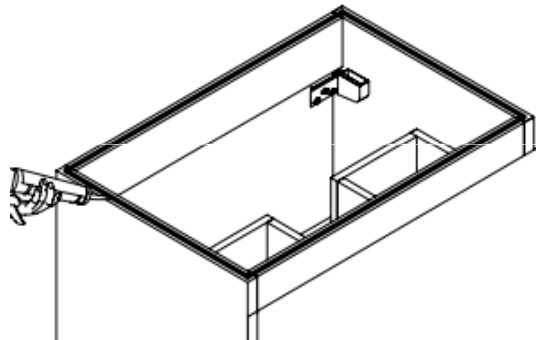

Care and maintenance:

To clean your polymarble basin only use a mild detergent. Do not use abrasive cleaners or chemicals as these can damage the surface.