

## FITTING INSTRUCTIONS - CONCRETE FLOOR

**STANDARD FIT**

**FLUSH FIT**

**WET ROOM**

**CONTENTS**

\*Important Information - See Below - Please Read First Prior To Installation

Standard Fit 1 - 6

Flush Fit 7 - 10

Off The Floor Plinth 11

Wet Room 12

Doors/Screens And Shower Heads 13

**STEPS**

1 - 6

7 - 10

11

12

13

## 1 - STANDARD FIT - STEPS 1-6

**1**

**2**

**3**

**4**

**5**

**6**

**1**

**2**

**3**

**4**

**5**

**6**

**1**

**2**

**3**

**4**

**5**

**6**

**STANDARD FIT**

**FLUSH FIT**

**WET ROOM**

**7**

**8**

**9**

**10**

**1**

**2**

**3**

**4**

**5**

**6**

**1**

**2**

**3**

**4**

**5**

**6**

## \*IMPORTANT INFORMATION - PLEASE READ FIRST

- This tray is handmade from natural materials. It is possible it may not be perfectly flat (approx 4mm tolerance) or may vary in thickness.
- Check the product thoroughly prior to fitting. Unfortunately no claims for imperfections can be made once the tray has been installed.
- The tray must be fitted **STRICTLY** in accordance with the installation instructions. Failure to fit and maintain the product as per the instructions will invalidate the guarantee and possibly lead to long term damage.
- The use of any materials other than those specified in the fitting instructions could result in the shower tray to fail, invalidating the guarantee.
- Fit ONLY** the waste unit supplied. Fitting any other waste unit may lead to a reduction in water flow.
- This shower tray and waste unit combine to achieve European EN124 approval for water drainage. They are designed to provide a water flow of over 20 litres per minute. Failure to fit the waste unit provided exactly in accordance with the fitting instructions (see enclosed within the 'Information Pack') may reduce water flow and create drainage problems.
- For cleaning information refer to the 'Cleaning and Maintenance' section of the accompanying 'Information Pack'.
- If this product has been fitted as part of a wet room, see 12. If it has been fitted as part of an enclosure, see 13 for help with the location of the shower head and glass screens.
- Do not allow any items such as hairnets, sponges etc., to obstruct the waste cover during showering, this could lead to overflowing.

## 11 - OFF THE FLOOR PLINTH

For more problematic plumbing situations, a comprehensive 'Fitting Kit' is available. This raises the tray off the floor to provide a simpler plumbing solution. For further details, see your retailer or installer.

## 12 - WET ROOM APPLICATION

Instructions 1-11 cover all showering applications which include a shower door or screen.

If your tray has been purchased to be fitted as part of a wet room area with no surrounding glass, the following instructions apply:

Fit your tray in accordance with the 'Standard Fit' instructions (above steps 1-6) and in conjunction, incorporate a proprietary wet room tanking system.

See your retailer/installer for full details.

## 13 - DOORS/SCREENS AND SHOWER HEADS

Always fit a door or screen unless fitting as part of a wet room - See fig 1 and refer to section 12

Never fit a shower head at the open end of an enclosure - See figs 2/3/4

When fitting a walk in front screen only, ensure that the screen is centrally located and approximately 3/4 the length of the tray - See fig 3

If fitting a side screen or the tray is adjacent to a wall, ensure that front screen is at least approximately 2/3 the length of tray - See fig 2 or 6

Always fit a front screen unless fitting as part of a wet room - See fig 5

Always fit full enclosures to 900x900 square and 900 quadrant trays - See fig 4/6

Fig 1 - No Panel/Enclosure

Fig 2 - Walk In - Front & Side Panel

Fig 3 - Walk In - Center Panel

Fig 4 - Square - Full Enclosure Only


Fig 5 - Two End Panels

Fig 6 - Walk In - Front Panel

Fig 7 - Door Enclosure

Fig 8 - Quadrant - Full Enclosure Only

## FITTING INSTRUCTIONS - WOOD FLOOR

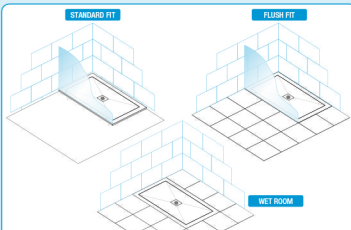








### CONTENTS

\*Important Information - See Below - Please Read First Prior To Installation





|                                |        |
|--------------------------------|--------|
| Standard Fit                   | 1 - 6  |
| Flush Fit                      | 7 - 10 |
| Off The Floor Plinth           | 11     |
| Wet Room                       | 12     |
| Doors/Screens And Shower Heads | 13     |

### STEPS

## 1 - STANDARD FIT - STEPS 1-6

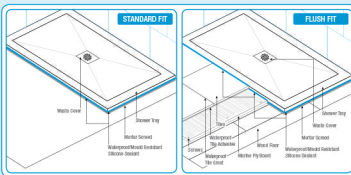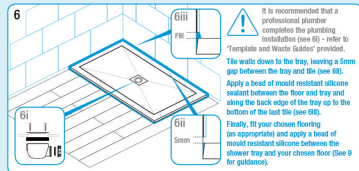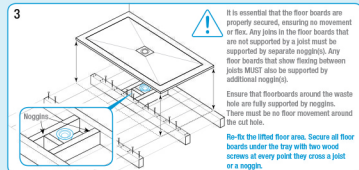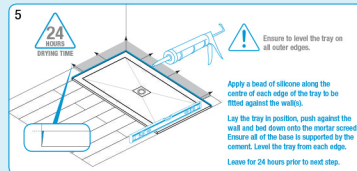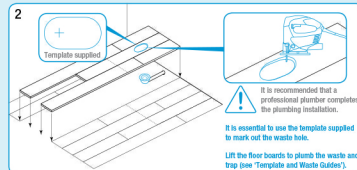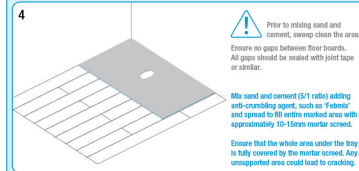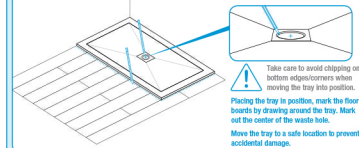


## 7 - FLUSH FIT - STEPS 7-10

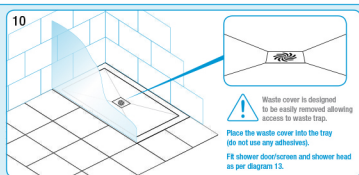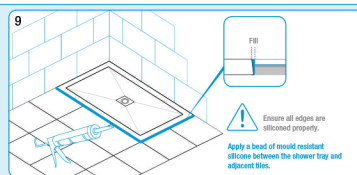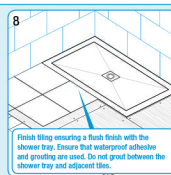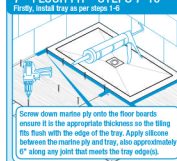


## \*IMPORTANT INFORMATION - PLEASE READ FIRST

- This tray is handmade from natural materials. It is possible it may not be perfectly flat (approx 4mm tolerance) or may vary in thickness.
- Check the product thoroughly prior to fitting. Unfortunately no claims for imperfections can be made once the tray has been installed.
- The tray must be fitted STRICTLY in accordance with the installation instructions. Failure to fit and maintain the product as per the instructions will invalidate the guarantee and possibly lead to long term damage.
- The use of any materials other than those specified in the fitting instructions could result in the shower tray to fail, invalidating the guarantee.
- Fit ONLY the waste unit supplied. Fitting any other waste unit may lead to a reduction in water flow.
- This shower tray and waste unit combine to achieve European EN1247 approval for water drainage. They are designed to provide a water flow of over 20 litres per minute. Failure to fit the waste unit provided exactly in accordance with the fitting instructions (see enclosed within the 'Information Pack') may reduce water flow and create drainage problems.
- For cleaning information refer to the 'Cleaning and Maintenance' section of the accompanying 'Information Pack'.
- There should be no movement in any wooden surface supporting the tray (see fig 3 - Wooden floor installation). Any movement should be prevented by adding noggin between floor joists where necessary. Any movement beneath the tray will eventually lead to cracking and will invalidate the guarantee.
- If this product has been fitted as part of a wet room, see 12. If it has been fitted as part of an enclosure, see 13 for help with the location of the shower head and glass screens. This will help prevent unwanted wet areas in your bathroom.
- Do not allow any items such as flannels, sponges etc., to obstruct the waste cover during showering. This could lead to overflowing.

## 11 - OFF THE FLOOR PLINTH

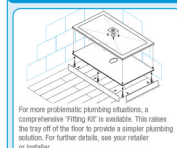

## 12 - WET ROOM APPLICATION

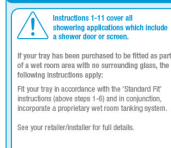

## 13 - DOORS/SCREENS AND SHOWER HEADS

